

Bodybuilder's Bulletin

29 November 2012


Bulletin No. 122

Earthing of High Current Consumption Equipment (revised) – All TG Product

When high current consumption equipment is mounted to the vehicle chassis (such as tail lifts) earth return connections **MUST** be made at the common earthing point and **NOT** the negative battery terminal.


The location of the common earth point varies depending upon the chassis range. Examples of where to find them are as follows:

TGX/TGS Option 1:

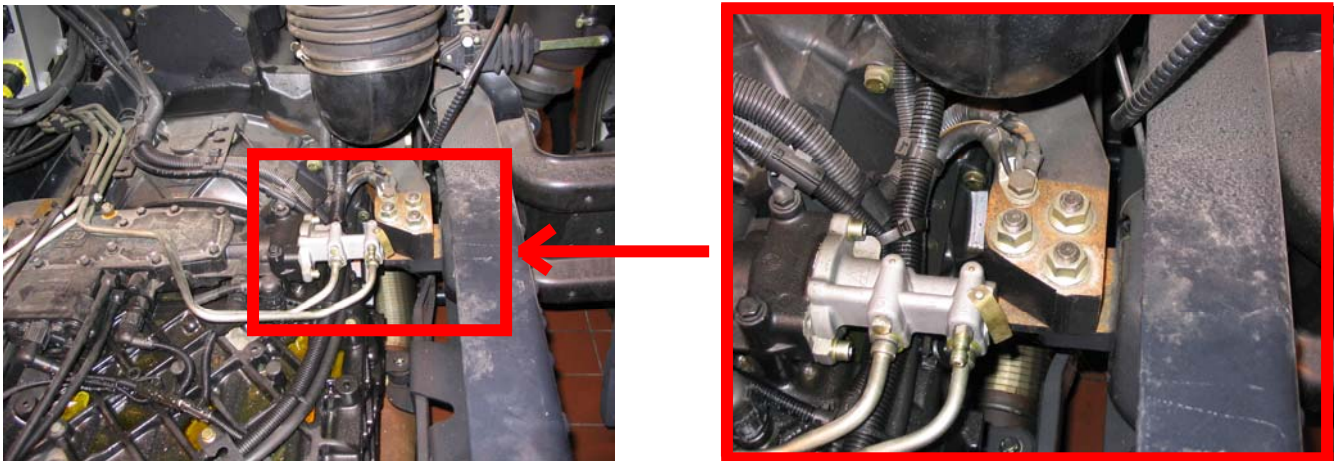

Common earth point can be found on the offside, to the right of the gearbox mounted on the gearbox mounting.

TGX/TGS Option 2:

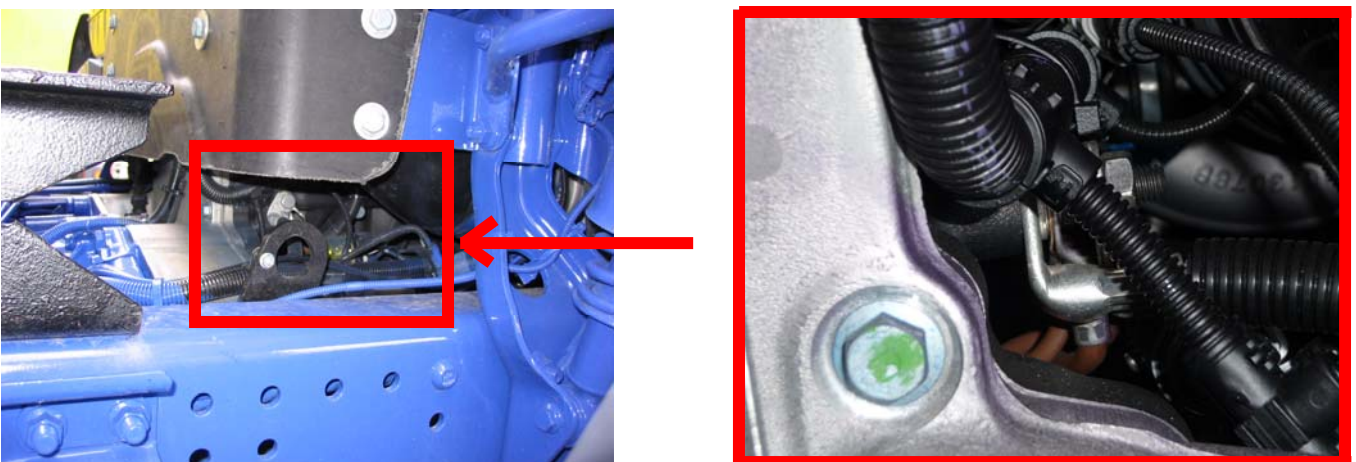


Common earth point can be found on the offside, forward of the gearbox mounted on the engine bell housing.

Should you have any queries on the above, please contact Engineering on 01793 448170.

Please circulate and then retain in the Body Builders Manual.

TGM/TGL

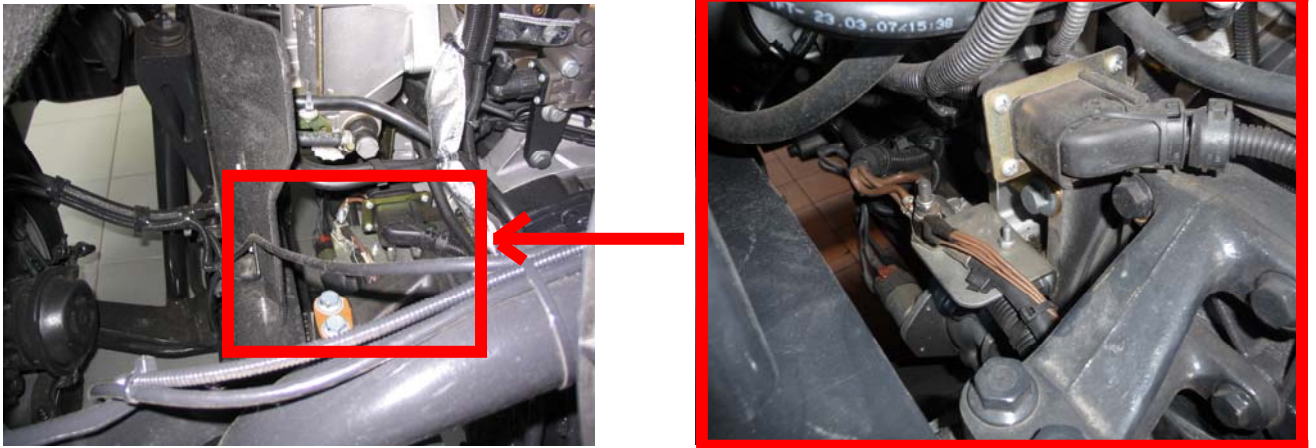

Common earth point can be found on the nearside, to the left of the gearbox mounted on an angled plate.

Should you have any queries on the above, please contact Engineering on 01793 448170.
Please circulate and then retain in the Body Builders Manual.